

ATTACCHI SPECIFICI PER - SPECIFIC FITTING KIT FOR
KIT DE MONTAGE SPECIFIQUE POUR - SPEZIFISCHER MONTAGEKIT FÜR
ANCLAJE ESPECÍFICO PARA

HONDA HORNET 600 2007

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE



Q.TY n.1



Q.TY n.2 (Dx-Sx)



Q.TY n.2



Q.TY n. 2





Q.TY n.4



Q.TY n.8



Q.TY n.4

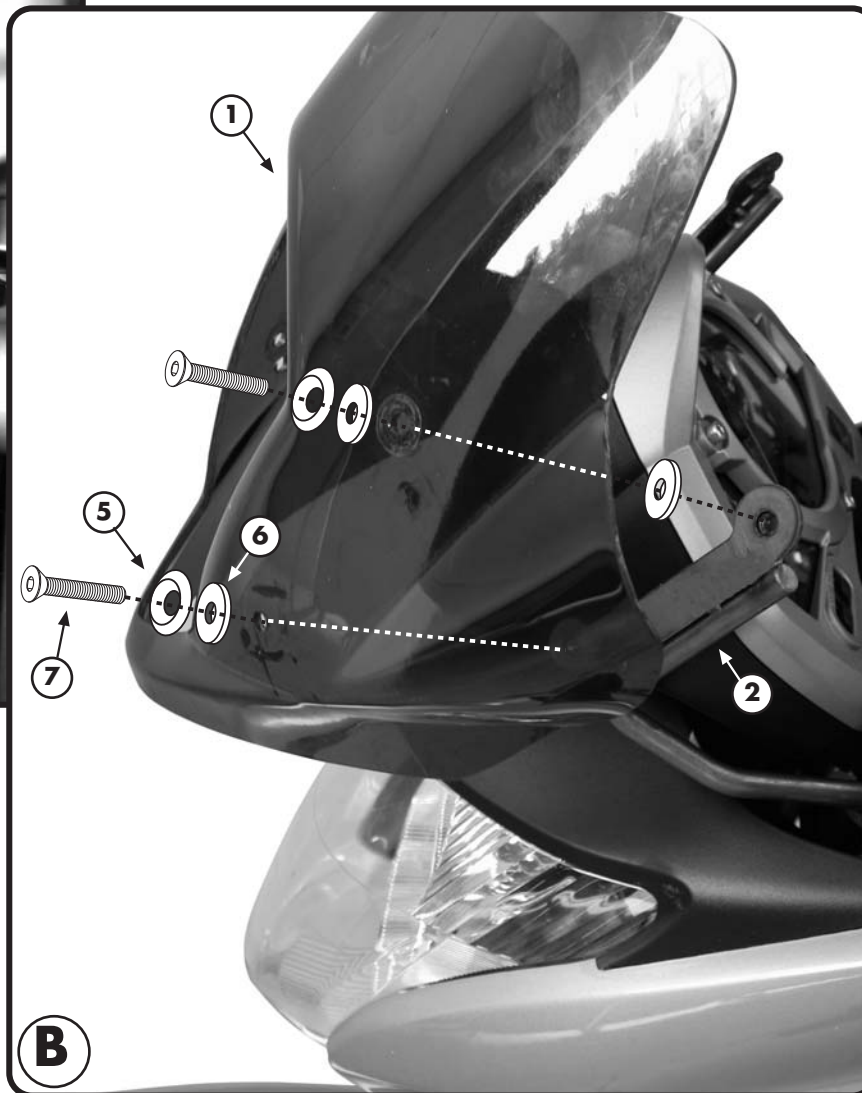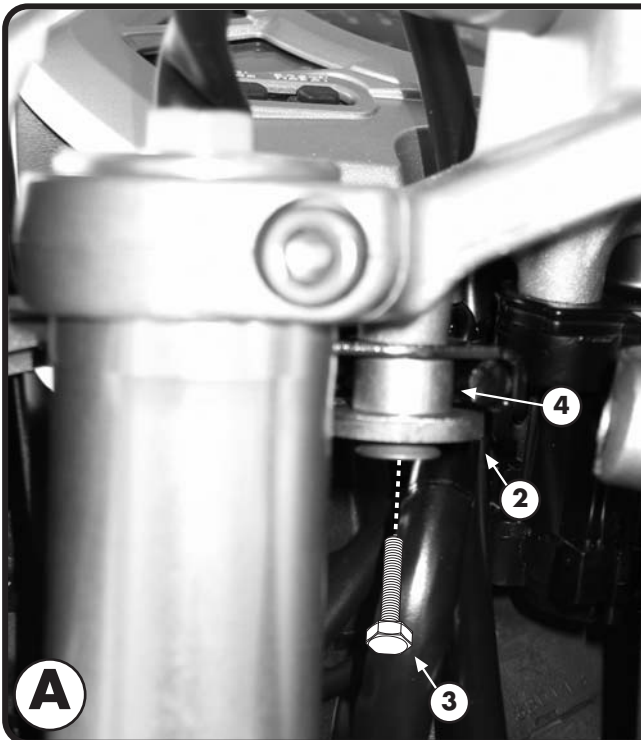

ATTACCHI SPECIFICI PER - SPECIFIC FITTING KIT FOR
KIT DE MONTAGE SPECIFIQUE POUR - SPEZIFISCHER MONTAGEKIT FÜR
ANCLAJE ESPECÍFICO PARA

HONDA HORNET 600 2007

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

I

ISTRUZIONI DI MONTAGGIO

- MONTARE I SUPPORTI "2" COME INDICATO IN FIGURA "A".
POSIZIONARE IL CUPOLINO "1" E SEGUIRE IL MONTAGGIO PROPOSTO IN FIGURA "B".
CONTROLLARE CHE TUTTE LE VITI SIANO SERRATE BENE.

GB

MOUNTING INSTRUCTIONS

1. MOUNT THE SUPPORTS N° 2 BY FIXING THEM TO THE FORKS BENEATH THE HANDLEBAR AS SHOWN IN PICTURE A;
2. PLACE THE WINDSCREEN N° 1 AND CARRY OUT THE MOUNTING SUGGESTED IN PICTURE B;
3. LASTLY CHECK THAT ALL SCREWS HAVE BEEN TIGHTENED.

F

INSTRUCTIONS DE MONTAGE

1. MONTER LES SUPPORTS "2" EN LES FIXANT AU DESSOUS DU GUIDON DE CHAQUE CÔTÉ DES TUBES DE FOURCHE COMME INDIQUE EN PHOTO «A».
2. POSITIONNER LE PARE-BRISE «1» ET EXECUTER LE MONTAGE PROPOSE EN PHOTO «B».
3. TERMINER LE MONTAGE EN CONTROLANT LE BON SERRAGE DE TOUTES LES VIS.

D

BAUANLEITUNG

1. MONTIEREN SIE DIE HALTERUNGEN NR. 2 BEFESTIGEN SIE DIESE AN DER LENKERGABEL WIE IM BILD A BESCHRIEBEN;
2. POSITIONIEREN SIE DAS WINDSCHILD NR. 1 UND FÜHREN SIE DIE MONTAGE VOM BILD B DURCH;
3. ZULETZT ÜBERPRÜFEN SIE, DASS ALLE SCHRAUBEN FESTGEZOGEN WURDEN.

ES

INSTRUCCIONES DE MONTAJE

1. MONTAR LOS SOPORTES "2" FIJANDOLOS DEBAJO DEL MANUBRIO AL LADO DE LAS HORQUILLAS COMO MOSTRADO EN FOTOGRAFIA A
2. POSICIONAR LA CUPOLA "1" Y SEGUIR EL MONTAJE PROPUESTO EN FOTOGRAFIA B
3. CONTROLAR QUE TODOS LOS TORNILLOS SE ENCUENTREN BIEN AJUSTADOS